

Instructions for the washing machine

1. Press the power button (1.)
2. Choose program (2.)
3. If you want, change temperature (3.)
4. If you want, change the speed of centrifugation (4.)
5. Start the machine by pressing Start/Paus (5) until the indicator for "Tvätt/Wash"-symbol lights up. The machine will start in some seconds.

You'll find detergent (free of bleach) on the shelf inside the toilet.

The programs

Bomull (Cotton)

Cotton clothes (sheets and bed linens, towels, bathrobes, lingerie etc.) The laundry is washed with large movements for a long period of time.

Bomull Eco (Cotton Eco)

Use this program to wash normally soiled, coarse cotton and linen. Even though the program is longer than all others, the savings of energy and water are very large.

Syntet (Synthetic)

Synthetic clothes (shirts, blouses, synthetic/mixed cotton etc). Program with a gentle movement and shorter washing programs compared to Cotton program. For more fragile clothes, use Fintvätt (Delicate Fabrics).

Ylle (Wool)

Woolen clothes. Choose the appropriate temperature and use suitable detergents for wool material.

Handtvätt (Hand wash)

Wool/fine wash that has the label "Not Machine Wash". The laundry is run with gentle movements in order not to damage the clothes.

Snabb (Quick wash)

Lightly soiled cotton clothes in a short period of time.

Expresstvätt 14 min (Express 14 minutes)

An even quicker program than "Snabbtvätt/Quick wash".